

Fitting Instructions - GPS Device Holder

WARNING - PLEASE READ THE INSTRUCTIONS BEFORE USING THE DEVICE HOLDER

1. We recommend fitting the device holder to the left side of the GoKart.
2. Follow photos 1 to 4 if your GoKart has standard speed control. Photos 5 and 6 apply to the the GoKart with Automatic control.
3. Loosen the two screws in the handle bracket and separate the two halves of the bracket (photo 1).
4. Hold the inner section of the handle bracket in position at the top of the handle and slide the outer section over it (photo 2 & 3).
5. Tighten the two screws in the handle bracket.
6. Attach the device holder adaptor plate using the threaded cap. Use a coin to ensure it is securely tightened (photo 4).
7. With the automatic handle, use a coin to remove the cap, and refit it to secure the adaptor plate (photos 5 & 6).
8. Attach the flexible arm to the back of the device holder. The 2 parts must lock together with a firm sideways movement (photo 7).
9. You can rotate the device holder by releasing the catch on the back (photo 8).
10. Slide the flexible arm into the slot on the adaptor plate (photo 9).
11. **WARNING:** When fitting your GPS device into the holder, you must ensure it is secure. Do not use the device holder if you're not positive your device is held firmly. Take extra care when moving over rough ground. Do not use the device holder if it becomes damaged. **GoKart cannot be held responsible for damage to your device while using this equipment.**

