## Fitting Instructions - Umbrella Holder



- 1. Follow photos 1 to 5 if your GoKart has standard speed control. Photos 6 to 8 apply to the the GoKart with Automatic control.
- 2. Loosen the two screws in the handle bracket and separate the two halves of the bracket (photo 1).
- 3. Make sure the two nuts are in position in the inner part of the handle bracket (photo 2).
- 4. Hold the inner section of the handle bracket in position at the top of the handle, and slide the outer section over it (photo 3). It can be fitted to either side of the handle.
- 5. Tighten the two screws in the handle bracket (photo 4).
- 6. Attach the rest of the umbrella holder to the handle bracket (photo 5).
- 7. The handle bracket is not required with the Automatic handle.
- 8. Remove the blanking plug in either side of the Automatic handle (photo 6).
- 9. Attach the umbrella holder to either side of the Automatic handle.



GoKart Electric Golf
Eagle House, Lakesview Business Park, Canterbury, CT3 4JZ
T 01227 712288 F 01227 710808 E go@gokart.co.uk

GoKart Europe
De Wetering 37, Oosterhout 4906 CT, The Netherlands
T +31(0)162 430080 F +31(0)162 425591 E go@gokartgolf.com